

Please rate this document after reviewing at the bottom of this page.

REPLACEMENT

[5Door]

⚠ CAUTION

- Put on gloves to protect your hands.


NOTICE

- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Remove the luggage floor net (A).
2. Remove the luggage floor box cover (B).
3. After loosening the mounting screws, then remove the luggage floor box trim (C).
4. Install in the reverse order of removal.

Information

- Replace any damaged clips.

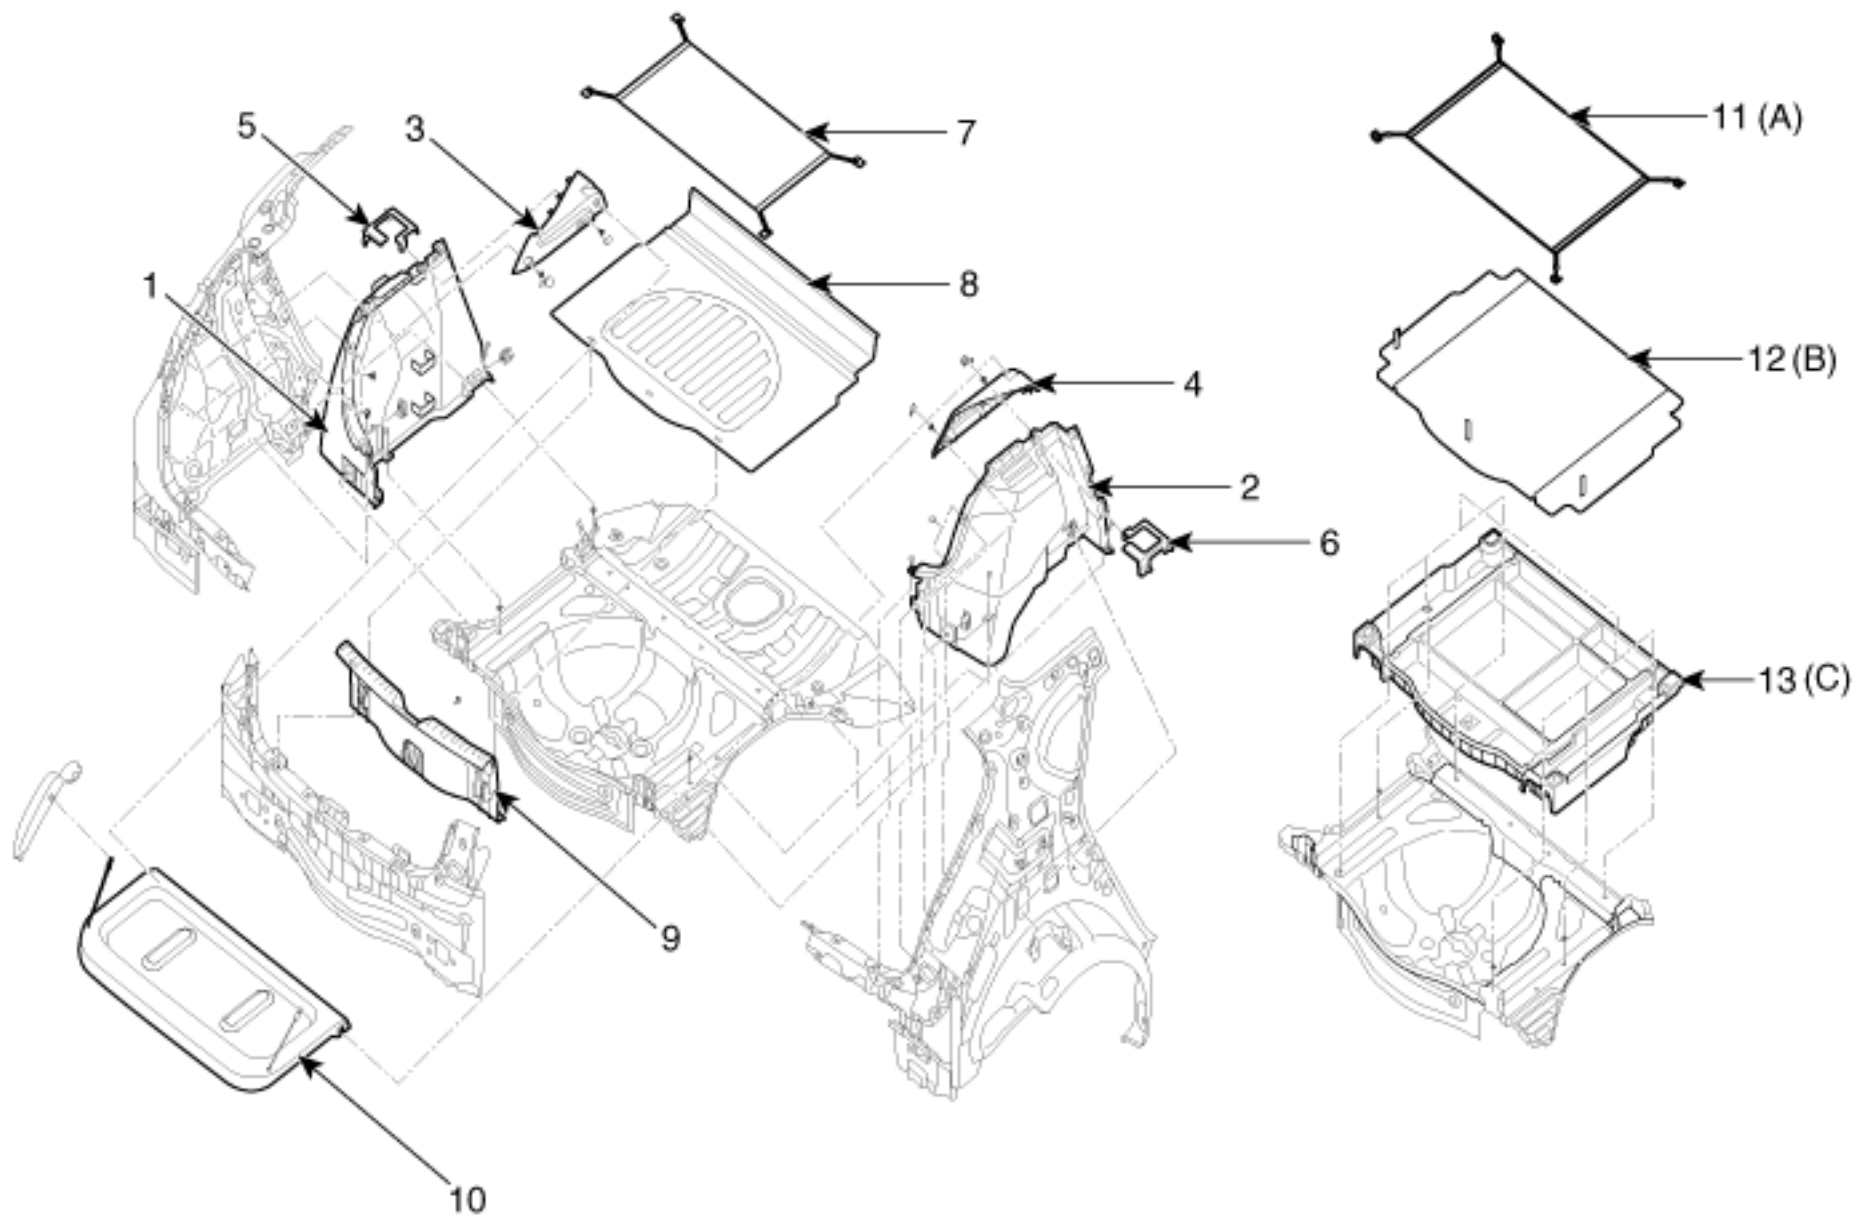

1. Luggage side trim [LH]
 2. Luggage side trim [RH]
 3. Rear shelf side trim [LH]
 4. Rear shelf side trim [RH]
 5. Rear seat belt bracket [LH]

6. Rear seat belt bracket [RH]
 7. Luggage net
 8. Luggage covering board
 9. Rear transverse trim
 10. Covering shelf

11. Luggage floor net
 12. Luggage floor box cover
 13. Luggage floor box trim

[3Door]


CAUTION

- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.
- Put on gloves to protect your hands.

1. Remove the luggage floor net (A).
2. Remove the luggage floor box cover (B).
3. After loosening the mounting screws, then remove the luggage floor box trim (C).
4. Installation is the reverse of removal.

NOTICE

- Replace any damaged clips.

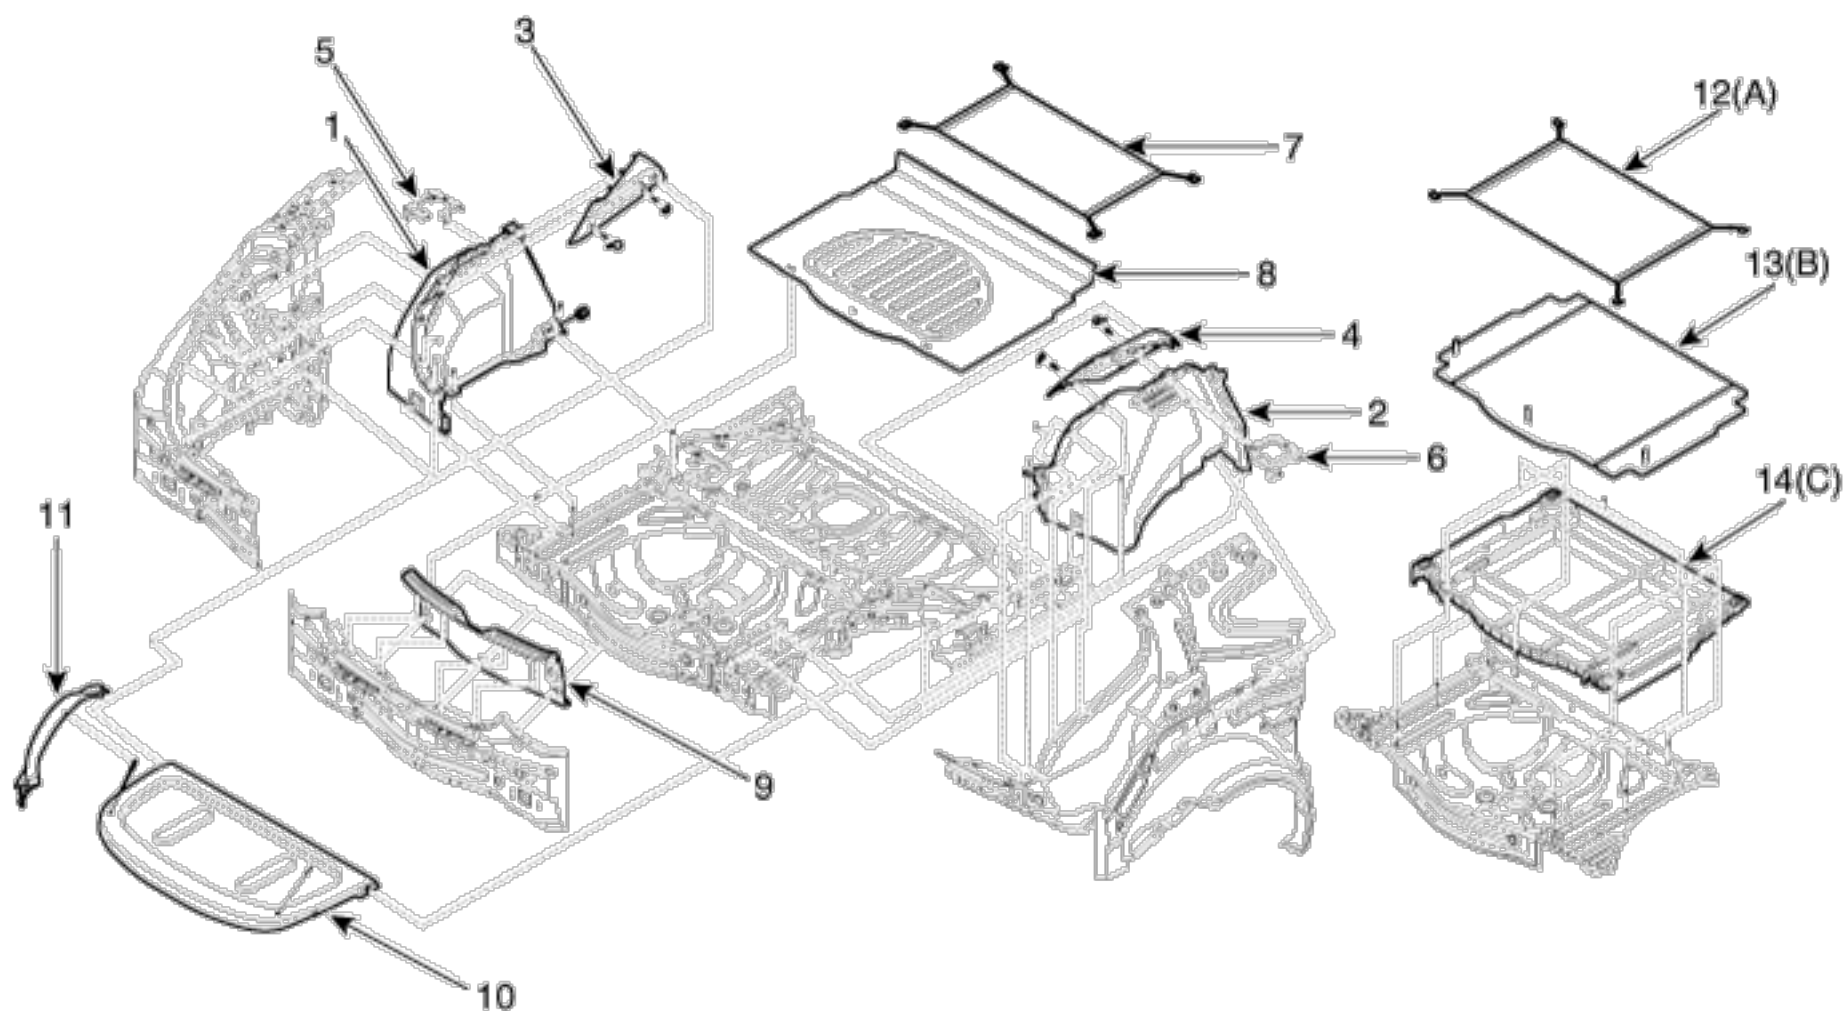

1. Luggage side trim [LH]
2. Luggage side trim [RH]
3. Rear shelf side trim [LH]
4. Rear shelf side trim [RH]
5. Rear seat belt bracket [LH]
6. Rear seat belt bracket [RH]
7. Luggage net

8. Luggage covering board
9. Rear transverse trim
10. Covering shelf
11. Tail gate side trim
12. Luggage floor net
13. Luggage floor box cover
14. Luggage floor box trim

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**